



GW3-TRBO™

600-2.0.5-T.1
07/15/2009

Trademarks

The following are registered trademarks of Motorola: MOTOTRBO™.

Any other brand or product names are trademarks or registered trademarks of their respective holders.

The Genesis Group Trademark Information

GenWatch3® is a registered trademark of GenCore Candeo, LTD., a subsidiary of Burks Gencore Co., Inc. D.B.A. The Genesis Group and Phil Burks.

Copyright

Copyright © 2009; Burks Gencore Co., Inc. D.B.A. The Genesis Group and Phil Burks. All rights are reserved. No part of this publication or the associated program may be reproduced, transmitted, transcribed, in whole or in part, in any form or by any means, whether it is mechanical, magnetic, optical, electronic, manual or otherwise, without the prior written consent of Burks Gencore Co., Inc. D.B.A:

The Genesis Group and Phil Burks

601 Shelley Dr., Suite 202

Tyler, Texas 75701.

Includes technology licensed from Motorola.

Disclaimer

The GW3-TRBO Users Manual is printed in the U.S.A. Burks Gencore Co., Inc. D.B.A. The Genesis Group and Phil Burks believe that the information included in this manual is correct; however, Burks Gencore Co., Inc. D.B.A. The Genesis Group and Phil Burks reserves the right to alter, revise and make periodic changes to the manual and its contents. Burks Gencore Co., Inc. D.B.A. The Genesis Group does not assume responsibility to notify any person of such revisions or changes. While we have taken strides to carefully examine our software and documentation and believe that it is reliable, the Genesis Group and Phil Burks assume no responsibility for the use of the manual, or GW3-TRBO software, nor for any patent infringements or other rights of third parties who may use the manual or the GW3-TRBO software. Burks Gencore Co., Inc. D.B.A. The Genesis Group and Phil Burks make no representations or warranties with respect to the contents or fitness for a particular purpose beyond the cost of the software paid by the end-user.

The software contains valuable trade secrets and proprietary information. Unauthorized use of the manual or software can result in civil damages and criminal prosecution. As an end user, you agree to abide by and heed these statements.

License

Title to the media on which the program is recorded and to the documentation in support of the product is transferred to you, but title to the program, and all subsequent copies of the program, despite the form or media in or on license is not a sale of the original or any subsequent copy. You assume responsibility for the selection of the program to achieve your intended results, and for the installation, use, and results obtained from the program.

Refer to the GW3-TRBO Manual Overview for your full license. All license information contained on pages 4-7 (Book 600-2.0.5-AA.1) are to be considered as contained herein.

Support

Customer satisfaction is our number one priority at Genesis. We are here to provide you with the best software possible, and we want to know when you have any questions, concerns or problems with GW3-TRBO so that we can make it a better product for everyone.

Refer to the Troubleshooting & Support section of this manual for complete support and contact information.

Document History

Revision	Description	Author
2.0.2	Initial Release	JAW
2.0.3	Added the <i>Additional Setup</i> and <i>Delivery and Validation</i> chapters	JAW
2.0.3	Revision before release	JAW
2.0.4	Added Require Delivery Before Acking Status/Message option description	JAW
2.0.4	Updated Fig 1.2 and Command Security section	KIH
2.0.5	Revision before release	JAW
2.0.5	Revisions for GW3-TRBO	REB

[Trademarks](#)

[The Genesis Group Trademark Information](#)

[Copyright](#)

[Disclaimer](#)

[License](#)

[Support](#)

[DOCUMENT HISTORY](#)

TABLE OF CONTENTS

ABOUT THIS MANUAL

[GOALS](#)

[WHO SHOULD READ THIS MANUAL?](#)

[HOW THIS MANUAL IS ORGANIZED](#)

CHAPTER 1 OVERVIEW

[TERMS](#)

[WHAT IS HALCYON?](#)

[RC CONNECTION](#)

[OTHER CONNECTION FUNCTIONS AND OPTIONS](#)

[Updating an Existing Connection](#)

[Deleting an Existing Connection](#)

CHAPTER 2 ADDITIONAL SETUP

[ALIAS SETUP](#)

[SECURITY SETUP](#)

CHAPTER 3 DELIVERY AND VALIDATION

[EVENT DELIVERY AND ACKNOWLEDGEMENT](#)

[Event Delivery Validation](#)

[RADIO COMMAND VALIDATION](#)

[Command Type Validation](#)

[Group Filter Validation](#)

[Validation Example](#)

[Validation Rejection](#)

Goals

This manual describes the role and function of the Halcyon module in the GW3-TRBO solution.

Who Should Read This Manual?

This manual is written for the intended audience of novice to mid-level trunked radio system users and novice



to mid-level PC users. If your GW3-TRBO installation is licensed for RC connections and you are responsible for setting up these connections, you should read this manual.

How This Manual Is Organized

This manual is organized as follows:

- **Overview:** Defines the Halcyon module and Halcyon GUI and gives instructions on configuring RC connections.
- **Additional Setup:** Describes the GW3-TRBO setup outside of Halcyon required for Halcyon to perform its RC-based functions.
- **Delivery and Validation:** Describes how Halcyon makes decisions when delivering and acknowledging radio events and when processing radio command requests.

This manual contains the following images, used to indicate that a segment of text requires special attention:

-  **Additional Information:** Additional information is used to indicate shortcuts or tips.
-  **Warning:** Warnings are used to indicate possible problem areas, such as a risk of data loss, or incorrect/unexpected function.

Chapter 1

Overview

This chapter defines the Halcyon module and the Halcyon GUI and gives instructions on configuring RC connections.

This chapter contains the following sections:

- **Terms:** Defines terms used in this document.
- **What is Halcyon?:** Defines the Halcyon module and Halcyon GUI.
- **RC Connection:** Describes the RC connection and its configuration..
- **Notes on Halcyon Connections:** Provides some additional information on these connections.
- **Other Connection Functions:** Describes the Cancel, Update and Delete functions.



Figure 1.1 – Halcyon GUI

Terms

-  **RC Connection:** This is a TCP/IP (internet protocol) connection that allows RC users to connect to the

Halcyon module. The RC GUI is described in detail in the RC module book.

 **Client:** A user connected to Halcyon via an RC connection.

What is Halcyon?

The GW3-TRBO Halcyon module manages RC connections. Managing these connections includes:

- Accepting connection requests from RC GUIs.
- Processing radio commands (such as Call Alert, Selective Inhibit, etc.) issued by RC clients.
- Relaying system events (such as Emergency Alarms) to RC clients.

These are just a few of the functions of the Halcyon module. Most of its functions are transparent to (not seen by) the RC clients (GW3-TRBO users).

The Halcyon GUI (Figure 1.1 above) allows you to configure RC connections. These connections interact with the Halcyon module to provide radio system interaction (sending commands and monitoring for events) to end users. Through this screen you can configure an RC connection.

RC Connection

If you are licensed for an RC connection, you will need to configure it via the Halcyon GUI. See the GW3-TRBO Core Manual for more information on viewing your license.

To configure an RC connection, take the following steps:

1. Load the Halcyon GUI.
2. Click on the **Add** button (If you have no connections configured, the **Add** button will be flashing): This will bring up the **Connection Type** screen shown in Figure 1.3.



Figure 1.3 – Connection Type

3. Select *RC* from the drop-down list.
4. Click **OK**: This will close the **Connection Type** screen and show the **RC Connection Settings** panel as shown in Figure 1.3.



Figure 1.4 – RC Connection Settings

5. Enter a **Connection Name**: This is for reference only; it is not used by GW3-TRBO. This connection name is only displayed in the Halcyon configuration screen.
6. Enter a **TCP/IP Port**: In most cases the default port of 9999 will work. If this port interferes with another application on your GW3-TRBO machine, you may need to change this port number.
7. Click the **Update** button: This will save your changes and inform the Halcyon module of the new connection. If you wish to cancel adding this connection, click the **Cancel** button.



NOTE: You can only configure one RC connection. All RC clients are handled by a single RC connection.

Other Connection Functions and Options

Updating an Existing Connection

When you create a connection, the properties of that connection are static (do not change). If for any reason you need to change the properties of a connection (RC TCP/IP port needs to be changed, etc.) take the following steps:

1. Select the connection that you wish to update from the **Connections** list: This will show the properties of this connection in the connection settings panel.
2. Change the settings that you wish to change.
3. Click the **Update** button: This will save your changes and inform the Halcyon module of the changes. If you wish to cancel this update, click the **Cancel** button.

Deleting an Existing Connection

If you ever need to delete an existing, take the following steps:

1. Select the connection that you wish to delete from the **Connections** list: This will show the properties of this connection in the connection settings panel.
2. Click the **Delete** button: This will show the dialog shown in Figure 1.5.

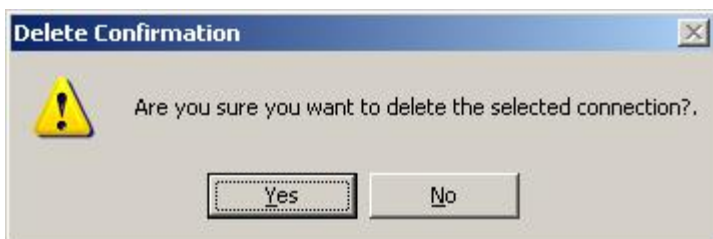


Figure 1.8 – Delete Confirmation

3. Click **Yes** to delete the connection. Click **No** to cancel the delete.

In addition to creating the Halcyon connections (described above), the following setup must be performed in order for Halcyon to perform its various RC-based functions:

Alias Setup

In the *Alias* screen, take the following actions:

- **Specify a Default Group for each radio ID:** *Default Group* has had many pseudonyms over the years, such as Home Talkgroup. This is the preferred group of the agency responsible for this radio ID.
- **Assign Event Acknowledgement Responsibility:** Each group shown in *Alias* provides the following acknowledgement options:
 - **Channels:** Set a distinct *Channel Position* for each Channel under each site. This value indicates the channel's position in your channel rack.

Security Setup

The RC tool relies on a GW3-TRBO user and that user's role to determine:

- **Radio Event Delivery:** This includes emergency alarm (EA) and PTTs. Halcyon validates the event's group or radio ID (by way of the radio ID's Default Group) before sending the event to a connected RC tool. (see *Event Delivery Validation* section below for more information.)
- **Valid Radio Command Request Types:** These are requested from RC tools for Halcyon to issue a radio command such as selective inhibit. Halcyon validates command request types selected under the Halcyon section of the user's role before sending the command.

In the Security screen, take the following actions:

- **Select Role Privileges:** In all RC roles, ensure that the appropriate privileges are selected under the Halcyon section. Reference the GW3-TRBO Core Manual, Chapter 8 for descriptions of the Halcyon role privileges.
- **Establish User Group Filters:** For all RC users, ensure that all valid groups are selected in the *Group Filter* section. If you want your users to have access to all groups, select the *ViewAllGroups* privilege on the user's role. This privilege overrides the *Group Filter* selection made at the user level and allows all users with this role access to all groups and all radio IDs.

Chapter 3

Delivery and Validation

This section describes some of the decisions that Halcyon has to make when delivering and acknowledging radio events and processing radio command requests.

Event Delivery and Acknowledgement

This section describes the validation path(s) that Halcyon uses when determining if it should send an event to a particular RC user and if it should acknowledge a radio event.

Event Delivery Validation

The following validation methods are used to determine if a connected RC tool should receive an event:

- **Emergency Alarms:** The following must be true in order for a user to receive an emergency alarm event:
 - The user's **Group Filter** (in Security) must contain the group the radio ID was **affiliated to** at the time of the event. Or the user's role must contain the *ViewAllGroups* privilege under the Halcyon section. This privilege bypasses **Group Filter** validation.
- **PTTs and Radio Acks:** The following must be true for a user to receive a PTT or radio ack event:
 - The user's Group Filter (in Security) must contain the **Default Group** assigned to the radio ID that issued the PTT or radio ack. Or the user's role contains the *ViewAllGroups* privilege under the Halcyon section.

Radio Command Validation

When Halcyon validates a radio command (such as selective inhibit), it validates the command on two levels:

- **Command Type Validation:** Compares the command type to the command types defined as a privilege on a user's role. This is defined in the Security screen.
- **Group Filter Validation:** Ensures that the user's **Group Filter** (in Security) contains the group (if any) and the default group of the radio ID included in the radio command. The radio ID's default group is assigned in Alias.

Command Type Validation

RC tools can only issue radio command types that are included as privileges in their user's role under the Halcyon section of **Role Privileges** in Security. Each radio command is listed below with its required privilege(s):

Radio Command	Required Privilege(s) in the Halcyon Section of Security
Call Alert	Call Alert
Database Snapshot	Database Snapshot
Radio Check	Radio Check
Remote Monitor Radio Trace	RMRT
Selective Inhibit Cancel Selective Inhibit	Selective Inhibit

Group Filter Validation

In addition to radio command specific role privileges, the user must have **Group Filter** (in Security) access to each radio ID and group in the command, or the user's role must have the *ViewAllGroups* privilege under the Halcyon section of **Role Privileges** (set up in Security at the Role level).

Validation Example

To issue a Radio Check command on radio ID 32226, your user's **Group Filter** must include the **Default Group** of radio ID 32226. Because no group is included in this radio command, only the **Default Group** of the radio ID is validated in the group filter validation.

If your user's role includes the *ViewAllGroups* privilege under the Halcyon section of the **Role Privileges** section in Security, your **Group Filter** list is not considered and the command will pass **Group Filter** validation.

Validation Rejection

Rejection occurs when a command is requested of Halcyon and the user issuing the command fails command type or group filter validation. RC users cannot access commands, radio IDs and groups that do not pass command type and group filter validation. Because all of these things are selected in RC (as opposed to typed), the user's invalid commands are proactively rejected.